

LED	Description
PWR (Power)	Steady on: Connected to power.
RUN (Operation)	<ul style="list-style-type: none"> ● Steady on: Normal. ● Blinks: Starting up.
NET (Network)	Steady on: Connected to network.
GUARD (Arming)	Steady on: Arming is enabled.
IR	<ul style="list-style-type: none"> ● Steady on: Activated for remote control. ● Blinks: Authenticating device code.
ALM (Alarm)	Steady on: Device alarm occurred.
CLOUD	Steady on: Connected to cloud.
HD (Hard Disk)	<p>One HD LED only:</p> <ul style="list-style-type: none"> ● Steady on: No disk; or disk is abnormal. ● Blinks: Reading or writing data. <p>One HD LED for each disk (Imperial 128 only):</p> <ul style="list-style-type: none"> ● Steady green: Normal. ● Blinks green: Reading or writing data. ● Steady red: Abnormal. ● Blinks red: Rebuilding array.